

HEEL PADS

Available Sizes

Large: 13" x 17.5"
Medium: 9.25" x 17.5"
Small 6.25" x 13"

NEW: Mini Heel Pads
5 3/4 x 10 5/8
(not pictured)



Available Colors

Black
Gray
Charcoal
Carmel
Saddle

Why use Heel Pads?

Heel pads are used to repair and/or hide damage caused by wear and tear in automotive carpeting. They can also be used in a variety of other ways. One tech told of how he cut down a large heel pad and adhered it to the back of a seat that had a hold punched through it. He then placed an exact match on the back of the other seat. **How do you use heel-pads?**